

TEJ201 - Pico-W

① Reset → Hold white button & plug in.

② You see new drive letter.

③ index.htm
↳ download.
UF2

④ flash-nuke.uf2

⑤ drag & drop onto Pi.
d: disappears!

- ⑥ open Thonny.
- ⑦ Run → Configurer
→ Interpreter
→ OK
- ⑧ bottom, RIGHT → Python 3
install
Micro Python

Target di
RP2
variant → Pico W
1.21.0
INSTALL
↙ bottom Right ↘
*pick Pico

Tools → Manage Package

SSD1306 →

Pi → have lib folder
SSD1306 ←

open → Save Copy
to Pico ←



